



Code Changing instructions for the CL200FP Digital Lock:

Should you need to change the code please follow the procedure listed below. Failure to do so may damage the components of the lock resulting in total lock failure.

1. Remove lock from door.
2. Turn lock over so the back of the unit faces you.
3. Hold in palm of hand with thumb exerting pressure onto the backplate.
4. Unscrew the two red screws from the back plate whilst maintaining thumb pressure. If you do not hold the plate down springs within the code chambers may become dislodged and lost.
5. Once the two red screws are released, gently and slowly release thumb pressure on backplate.
6. Gently lift backplate off the lock body turn over and gently place to one side on flat surface taking care not to dislodge springs. If a spring does become detached it can be gently pressed back into its location.
7. With the back of the lock still facing you, place your finger or thumb on the 'C' button. Each of the chambers is marked clearly on back of lock so you can locate the 'C' button.
8. Maintaining the pressure on the 'C' button you can now remove the red and blue tumbler plates with the tweezers provided and re set your four digit code.
9. This is done by simply placing the red (code tumblers) with the blue (neutral tumblers) in different chambers. Note the nipple on the tumbler plates and when placing back in the chambers this nipple should line up with groove provided in each chamber.
10. Having completed code change take finger off 'C' button and gently replace backplate.
11. The lock can now be re installed onto the door

Note: The 'C' button should always remain part of your code as this clears and resets the tumblers after each use.